



PREPARING THE TREATMENT

 
1 Job selection

From the Spraying Menu, press key and hold to select spraying job.




2 Reset total counters

From the Spraying Menu, press key and hold to select spraying job.




3 Tank Filling

 From the Spraying Menu, press to select the value to be set.




USE


1 Automatic treatment control

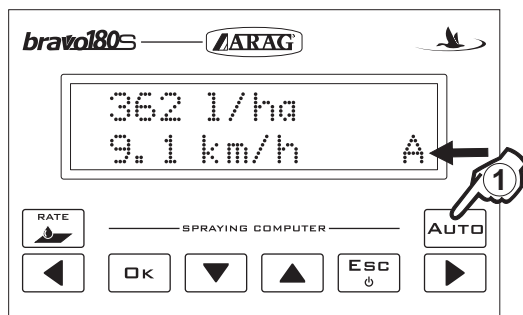


- ① Press to enable automatic mode.
- ② Turn on the section valves required.
- ③ Drive to the start of the field.
- ④ Set the main control switch up.
- ⑤ Run the treatment.

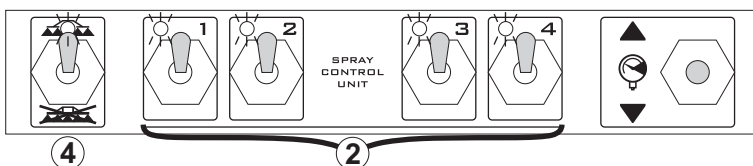


2 Temporary variation in rate

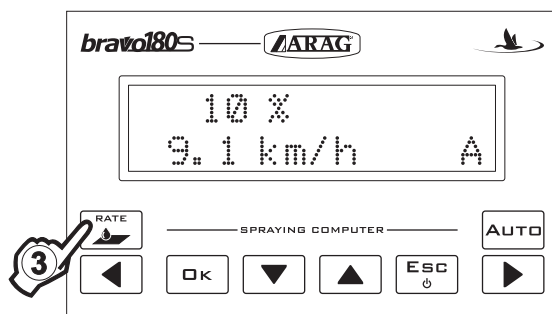

- ① Press the switch up to increase the delivery value.
- ② Press the switch down to decrease the delivery value.
- ③ Press to reset the rate variation percentage.

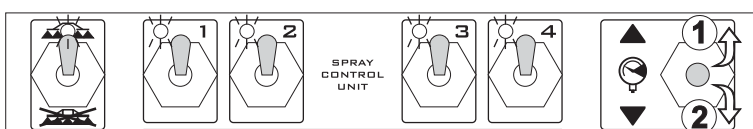

KEY TO ITEMS ON DISPLAY

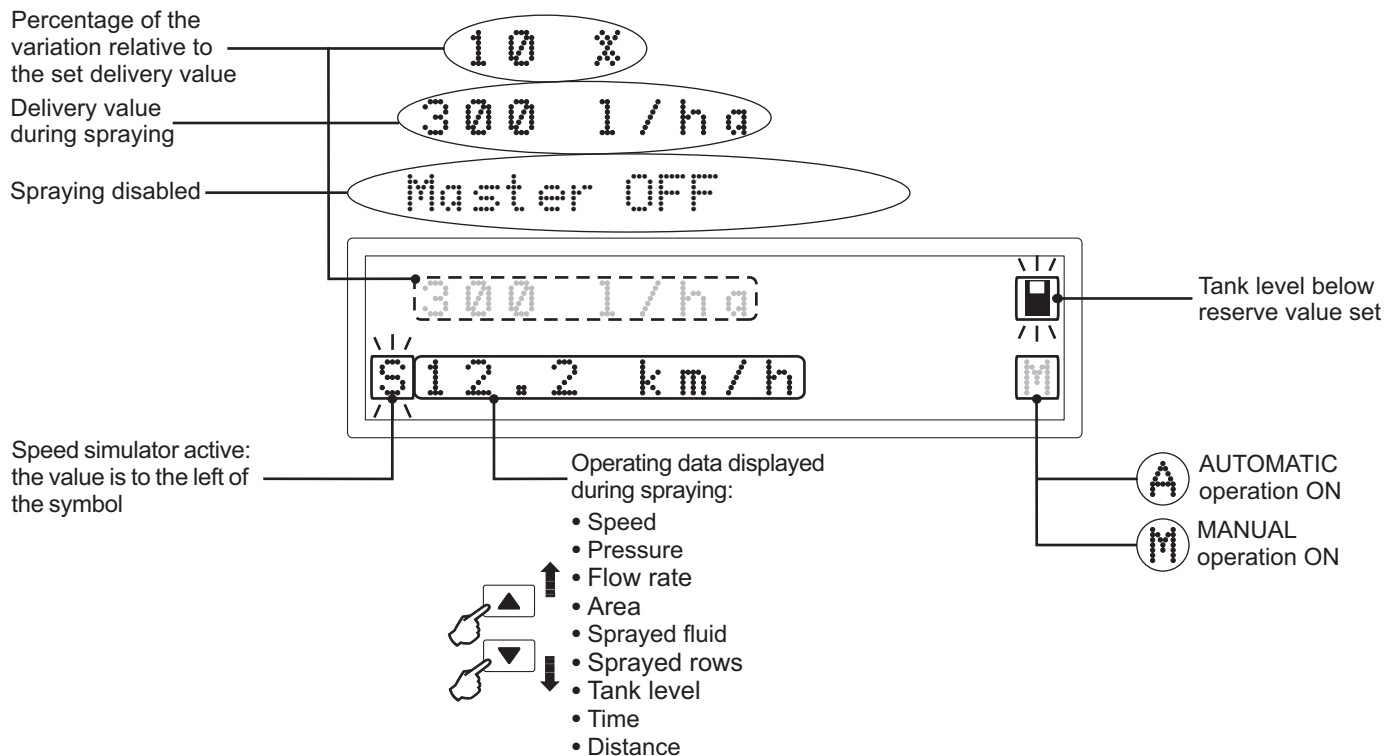


OPERATING ALARMS

- The computer is not receiving the speed of the tractor and spraying is enabled (main control switch "ON"). The messages shown flash alternating.



 - The computer detects zero flowrate and spraying is active (main switch valve "ON"). The messages shown flash alternating.



- Speed too high or low for the set dosage.



- For 4-section Bravo 180S only

One section out of four or three sections out of four are closed, or the two upper or lower sections are closed: spray rate is changed to keep pressure constant.



SELECTING THE WHEEL TYPE (CONSTANT)

From the Spraying Menu, hold down to access the User Menu.

