



NOTES:

1. 3 WIRE DUMP VALVE MUST BE FITTED FOR DUMP VALVE ACTIVATION
2. SERVO VALVE WIRES MAY NEED TO BE REVERSED AT VALVE DIN CONNECTOR ON BA70LOOM/1 TO CONFIRM CORRECT VALVE OPERATION

BA70LOOM/110  
 AUTO SECTION CONTROL  
 ADAPTOR LOOM

19th MAY 2010

