

TO OPEN THE WEEDIT BOOM >>> Ideally perform all folding operations on flat ground


1. Hold the **LATCH ARMS** switch **DOWN** to set the latches to the Lock position. Check the locking rams are retracted.



2. Fully extended both stay arms. Hold the **FOLD ARM** switch to the **OUT** position until both sides are fully extended.





3. Set the **BOOM WHEELS** switch to **PART FOLD**, this will only allow the boom wheels to rotate 1/2 of their travel.

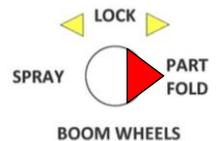


4. Drive forwards slowly below 5 KM/H. While moving forward, hold both the **LH WHEEL** & **RH WHEEL** switches **DOWN**, this will allow the booms to move approximately out half way

- It will take approximately take 10 ~ 30 metres of travel to accomplish this, depending on the soil conditions.
- Set the **BOOM WHEELS** switch back to the **LOCK** position.

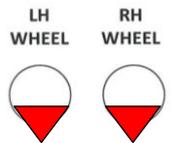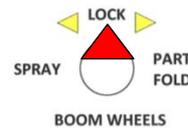

Rotate the main wheels back to the original position, so they are in-line with the boom. Hold both the **LH WHEEL** & **RH WHEEL** switches to the **UP** position until done.

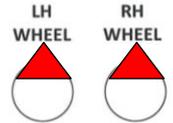


5. Reverse slowly until the booms arms have opened all the way and the fold arms have latched into the locks.


- If one side latches before the other side use the wheel switch to rotate the wheel to the field position to prevent the wheels from bulldozing.
- It will take around 10 metres of travel to accomplish this, depending on the soil conditions.
- **Double check** that both stay arms are docked & locked.



6. Rotate both of the main wheels outwards 90 degrees, to now point in the direction of travel. Hold both the **LH WHEEL** & **RH WHEEL** switches to the **DOWN** position until done (a few seconds).

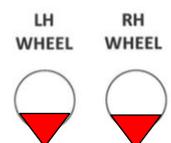


7. **Spray mode** : Set the **BOOM WHEELS** switch to **SPRAY** position. This will allow the boom wheels to float when turning. Go spraying.

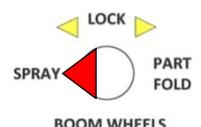

TO FOLD THE WEEDIT BOOM >>> Ideally perform all folding operations on flat ground


1. **Lock the wheels** (facing direction of travel). Set the **BOOM WHEEL** switch to **LOCK**

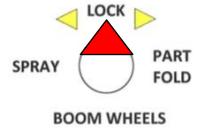

2. **Unlock the arms.** Move the **LATCH ARMS** switch **UP** to UNLOCK



3. **Drive forwards slowly below 5 KM/H.** While moving forward, hold both the **LH WHEEL** & **RH WHEEL** switches **UP**, this will move the wheels into the transport position (in line with the boom). Travel forwards slowly until both booms are in the folded position.


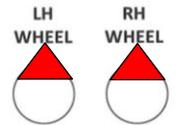


4. **Fold in both stay arms.** Hold the **FOLD ARM** switch to the **IN** position until both sides are fully retracted. Only fold the arms in when the booms are fully folded together.



5. **Set up the machine for safe transport.** Fit the boom transport chain and arm locking device.

Turn off the master switch.

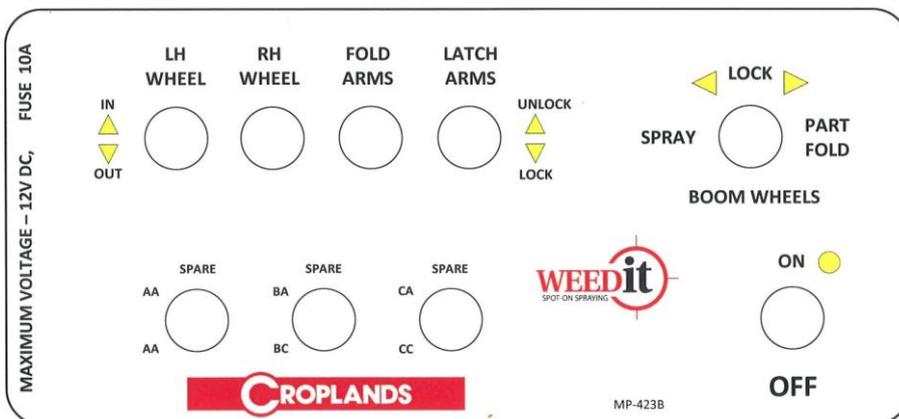

NOTE: It is vital that the correct parking procedures are followed. Failure to follow these guidelines may result in damage to the sprayer. **Ideally perform all folding operations on flat ground.**