


MT90LOOM/2-RV50 ADAPTOR LOOM
NODE TO SPRAYER LOOM

| PIN | DESIGNATION | COLOUR |
|-----|----------------|--------|
| A | SPEED SIGNAL | YEL |
| B | SENSOR 12 + VE | GRN |
| C | GRND | BLU |

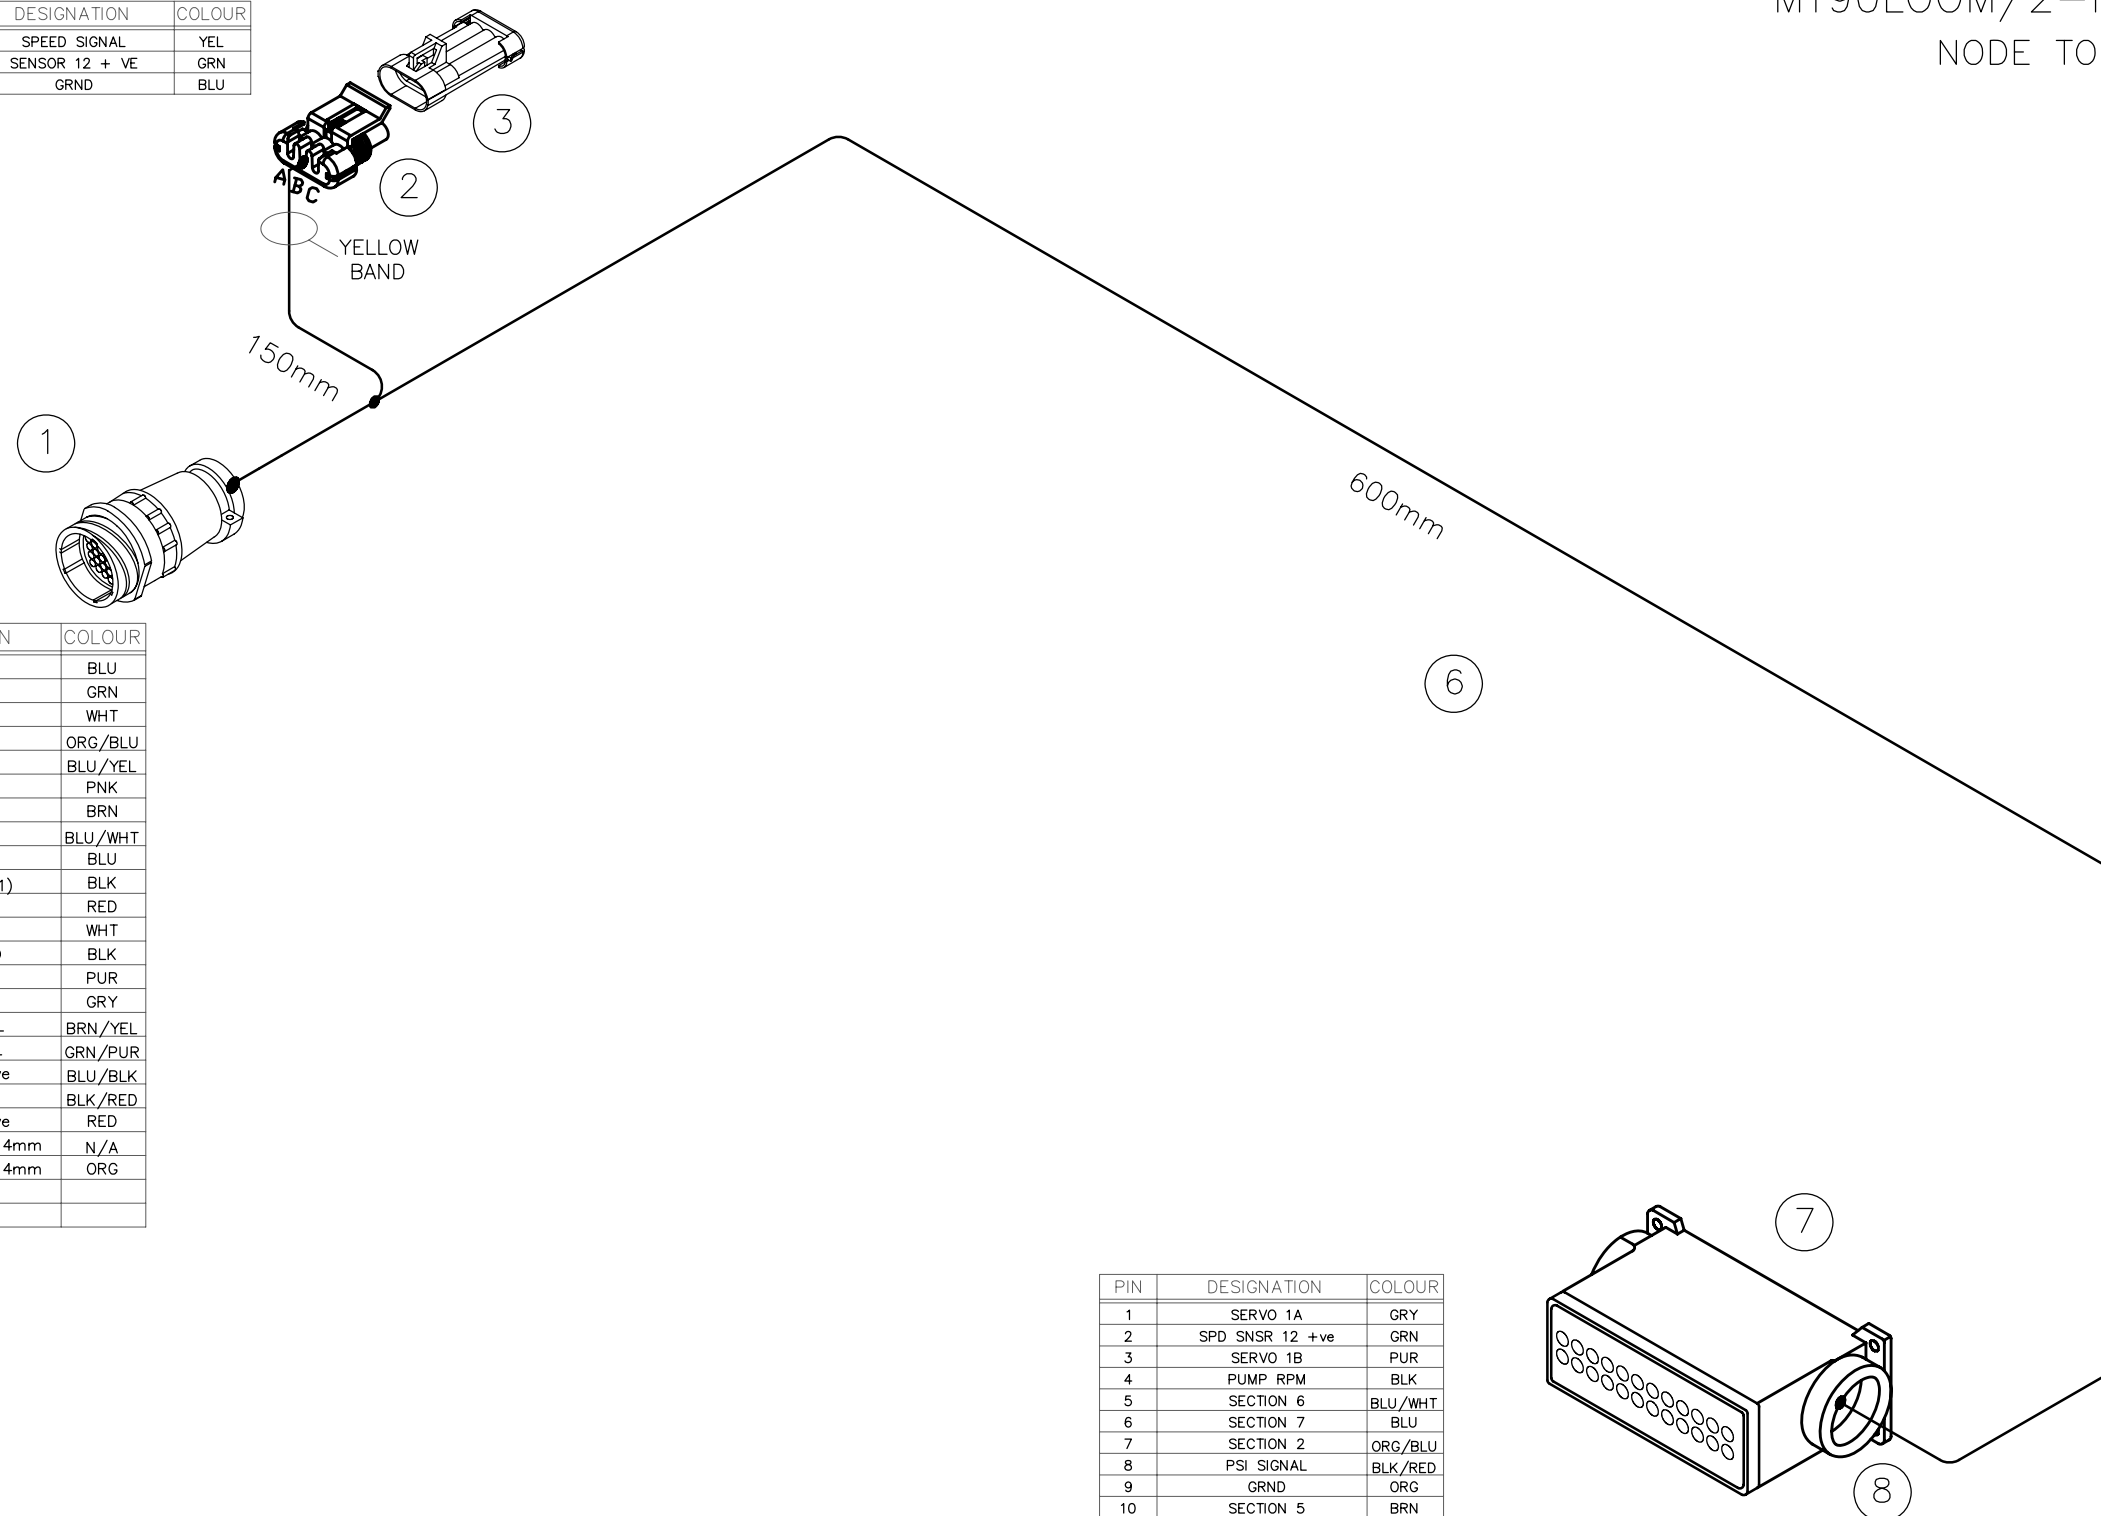

NOTE:
DIMENSION REF

| PIN | DESIGNATION | COLOUR |
|-----|--------------------|---------|
| 1 | GROUND | BLU |
| 2 | GROUND | GRN |
| 4 | SECTION 1 | WHT |
| 5 | SECTION 2 | ORG/BLU |
| 6 | SECTION 3 | BLU/YEL |
| 7 | SECTION 4 | PNK |
| 8 | SECTION 5 | BRN |
| 9 | SECTION 6 | BLU/WHT |
| 10 | SECTION 7 | BLU |
| 11 | SECTION 8 (T1) | BLK |
| 12 | SECTION 9 | RED |
| 13 | SECTION 10 | WHT |
| 14 | PUMP SPEED | BLK |
| 15 | SERVO B | PUR |
| 16 | SERVO A | GRY |
| 24 | DUMP SIGNAL | BRN/YEL |
| 28 | FLOW SIGNAL | GRN/PUR |
| 30 | SENSOR 12+ve | BLU/BLK |
| 31 | PSI | BLK/RED |
| 34 | SENSOR 12+ve | RED |
| 36 | 12 +ve SECT Vv 4mm | N/A |
| 37 | 12 +ve SECT Vv 4mm | ORG |

| PIN | DESIGNATION | COLOUR |
|-----|-----------------|---------|
| 1 | SERVO 1A | GRY |
| 2 | SPD SNSR 12 +ve | GRN |
| 3 | SERVO 1B | PUR |
| 4 | PUMP RPM | BLK |
| 5 | SECTION 6 | BLU/WHT |
| 6 | SECTION 7 | BLU |
| 7 | SECTION 2 | ORG/BLU |
| 8 | PSI SIGNAL | BLK/RED |
| 9 | GRND | ORG |
| 10 | SECTION 5 | BRN |
| 11 | GROUND | BLU |
| 12 | 12 + VE SECT Vv | ORG |
| 13 | SENSOR 12 + VE | BLU/BLK |
| 14 | SECTION 4 | PNK |
| 15 | SECTION 8 | BLK |
| 16 | SENSOR 12 + VE | RED |
| 17 | SECTION 3 | BLU/YEL |
| 18 | FLOW SIGNAL | GRN/PUR |
| 19 | DUMP | BRN/YEL |
| 20 | SECTION 1 | WHT |
| 21 | SPEED SIGNAL | YEL |
| 22 | SECTION 9 | RED |
| 23 | SECTION 10 | WHT |
| 24 | GROUND | GRN |

